

Cutting Optimization Library CutGLib.

Copyright © 2017 Optimalon Software Ltd. All rights reserved.

<http://www.optimalon.com>

1. General Information.....	1
2. Library Interface.....	3
Input Properties:	3
Result Properties:	6
Setup Methods:.....	7
Linear (1D) methods:	7
Rectangular (2D) methods:.....	10
Calculation Methods:	11
Linear (1D) method:	11
Rectangular (2D) method:	11
Result Methods:.....	12
Linear (1D) methods:	13
Rectangular (2D) methods:.....	15
Getting cuts.....	16
Export results to file	17
3. Example of the Library Usage. (C# syntax)	19
3.1. Cut one linear stock.	19
3.2. Cut multiple size linear stocks.....	20
3.3. Cut one size stock.	21
3.4. Cut multiple size stocks.	22

1. General Information.

CutGLib is a software library to perform the cutting optimization for rectangular (2D) and linear (1D) parts.

Having a list of rectangular parts CutGLib finds how to cut them from rectangular stocks with minimal material waste.

The library not only finds the parts placement but also generates the cutting instructions that can be easily translated for the CNC controllers.

The main features of CutGLib are:

- Cutting complexity levels from 2 (simple XY cuts) to 6.
- Horizontal, Vertical and Automatic cutting directions.
- Minimization stock panels rotation.
- Multiple sizes of the stocks.
- Minimization of the cutting layouts (woodworking feature).
- Non-zero saw thickness / kerf, part-to-part gaps.
- Generates list of remaining parts for guillotine cutting.
- Preserve part / grain orientation.
- Rotation of parts by 90 degrees for better optimization.
- Incomplete optimization for limited number of stocks.
- Unlimited parts and stocks quantities.
- Simple programming interface.
- Support various operating systems and platform.

The typical workflow is:

- Create the instance of the calculation class.
- Specify stock parameters (AddStock / AddLinearStock).
- Specify list of rectangular parts to cut (AddPart / AddLinearPart).
- Specify the saw thickness / kerf if applicable.
- Run the optimization process using 1D or 2D calculation methods.
- Get the coordinates of the parts or/and cutting instructions.

The optimization engine performs two major steps of the calculations:

- **Parts placement.** All specified parts get moved and turned in different ways to find such layout that occupies as less space as possible. Also the cutting instructions are generated during this step.
- **Quality control.** The quality control module performs several post-processing checks to assure the solution is valid and accurate. It checks if there are any intersections between the parts, cutting planes and the parts and checks if the list of cutting planes is complete for all parts.

If the engine encounters any problems during the calculation then it returns the error message.

The library is written on C# for .Net Framework. It can be used for the desktop computers (Windows 2000, XP, Vista, 7 and later), CNC machines (Windows CE 4.x and higher) and even for handheld devices such as Pocket PCs and Smartphones (Windows Mobile 2003 and higher).

The library can be easily integrated into .Net development tools (Visual Studio .Net) as well into traditional Win32 tools such as Ms Visual Basic, Borland Delphi and Ms Visual C++.

Numerical Precision

CutGLib supports values with up to 7 digits of the precision for all objects. It means all part sizes, stock sizes, saw kerf and other numeric values specified by the user of the library should fit into 7-digits range.

Let's consider some examples. Please note: the red digits don't fit into 7-digits range and will be removed (rounded up).

Example 1: If a stock length is **2500.0** (4 digits before the decimal separator) then the saw kerf can only be specified with up to 3-rd digits after the decimal separator (**0.001**). Saw kerf specified as **0.0125** will be rounded up to **0.013**.

Example 2: A stock length of **150.0** and part width of **2.1078** fits into 7-digits range. However, a part width of **1.031235** will not fit and will be rounded up to **1.0312**.

2. Library Interface.

All indices are zero-based in the library. Indices are **0..N-1** for **N** objects.

The library provides its functionality via one interface class **CutGLib.CutEngine** with the following public members:

Input Properties:

`bool CompleteMode;`

Indicates that all of the parts have to be placed to accept the calculation was successful. If only some of the parts are required to be placed then set **CompleteMode** to **false**.

This property plays important role when the stock size is less than size of the parts to be cut from the stock.

`double SawWidth;`

Defines the saw thickness / kerf size / part to part gap. This value will be taken in account during the calculation.

`double TrimLeft;`

Defines the size of unused (trim) size on the left side of the stock.

`double TrimTop;`

Defines the size of unused (trim) size on the topside of the stock.

`double TrimRight;`

Defines the size of unused (trim) size on the right side of the stock.

`double TrimBottom;`

Defines the size of unused (trim) size on the bottom side of the stock.

`bool UseLayoutMinimization;`

If this property is TRUE then the calculation engine tries to minimize the number of different cutting layouts. This is a very important for wood cutting when the operator can load several stocks into the cutting machine and process them at once. If this property is FALSE (default) then the engine tries to minimize the number of stocks.

`int MaxLayoutSize;`

Defines the maximum number of stocks that can be cut at once from one layout. Works only if **UseLayoutMinimization** is **true**.

`double WasteSizeMin;`

Minimal acceptable size of the waste parts (0 - no restrictions). It plays an important role when cut glass stocks – because it's impossible to cut tiny pieces of glass.


`String Version;`

Version of the library.

bool **MinimizeSheetRotation;**


It produces cutting layouts that require less stock panel rotations during the cutting operations. Therefore it minimizes the physical efforts and preparation time during loading/unloading stage of the cutting jobs. However, it may produce more waste parts and increase the total cutting lengths.

MinimizeSheetRotation = false

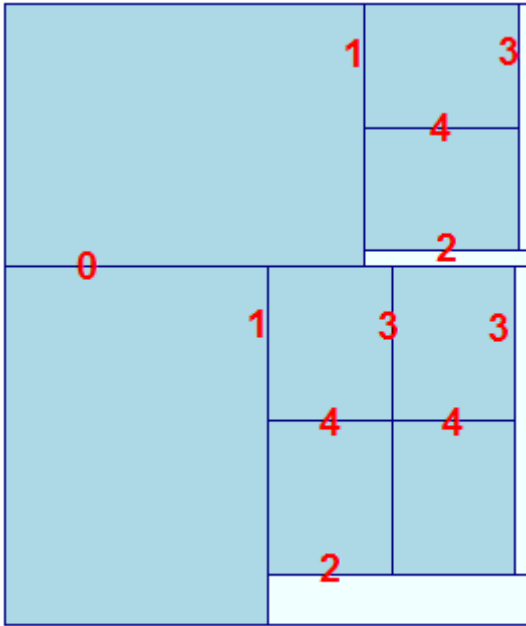

4 rotations, 4 waste parts



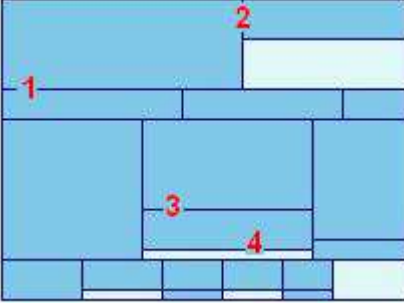
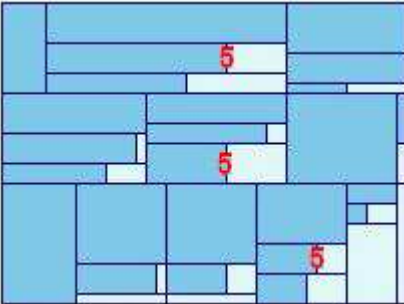
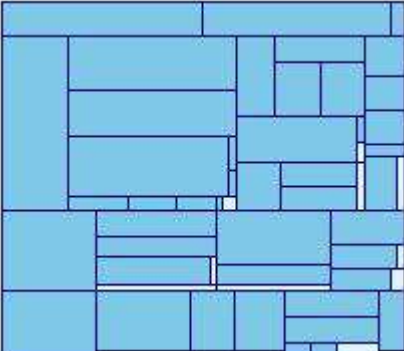
MinimizeSheetRotation = true

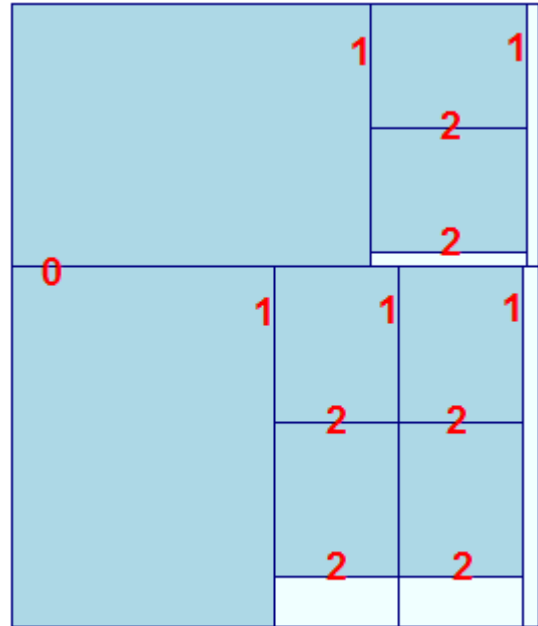

2 rotations, 5 waste parts

int **MaxCutLevel;**

Defines how complex the result layout will be. It goes from **2** to **6**. Level 2 allows only two cutting planes (so-called X/Y cuts) and it produces the result with the most material waste. However, this level is the simplest one to cut by hand.

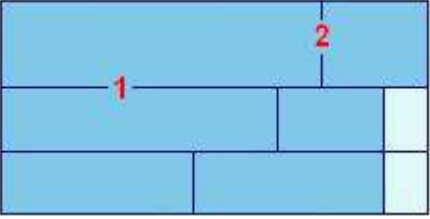Example	MaxCutLevel	Description
	2	<p>Level 1 cuts split the stock panel by making cuts across the stock from one side to another.</p> <p>Level 2 cuts produce actual parts by slicing the stripes from the level 1 cuts.</p>
	3	<p>In addition to 1 and 2 levels the cuts on the level 3 produces the actual parts by making cuts of level 2 results.</p>
	4	<p>In addition to 1..3 levels the 4th level can cut the parts from the level 3 leftovers.</p>
	5	<p>Levels 5 cuts the leftovers from the level 4 cuts and therefore produces more complicated layout with the less waste.</p>
	6	<p>Level 6 produces the most complex and the most optimized layouts. It's a default level for CutGLib library.</p>

Result Properties:

`int StockCount;`

Read-only property defines the total number of stocks specified in the cutting project.

`int UsedStockCount;`

Read-only property defines number of stocks that were used to cut all parts.

`int LinearStockCount;`

Read-only property defines the total number of linear stocks specified in the cutting project.

`int UsedLinearStockCount;`

Read-only property defines number of linear stocks that were used to cut all parts.

`int RemainingPartCount;`

Read-only property that defines number of remaining parts left after all cuts have been done. If the value is 0 then all parts have been used.

`int PartCount;`

Read-only property defines total number of parts specified in the cutting project.

`int PlacedPartCount;`

Specifies the number of parts have been processed and placed. It has the same value as **PartCount** in the most cases, but if **CompleteMode** is FALSE then **PlacedPartCount** can be less than **PartCount** indicating the fact that not of the parts have been placed.

`int LayoutCount;`

Read-only property defines number of different layouts / patterns of the cutting optimization.

`double ElapsedTime;`

Read-only property defines elapsed time in seconds spent for the calculation.

Setup Methods:

`void Clear()`

Clears all parts and settings from the calculator. This method is usually invoked to prepare another calculation.

Linear (1D) methods:

`bool AddLinearStock(double ALength, int aCount, string aID)`

Creates **aCount** new linear stocks with the specified length and text ID. After the optimization is done the list of used and un-used stocks gets created.

`bool AddLinearStock(double ALength, int aCount)`

Creates **aCount** new linear stocks with the specified length. After the optimization is done the list of used and un-used stocks gets created.

`bool AddLinearStock(double ALength)`

Same as `AddLinearStock(ALength, 1)`.

`bool AddLinearPart(double aLength, int aCount)`

Creates and stores **aCount** new linear (1D) segments defined by **aLength** parameters.

The method returns **true** if the segments have been successfully created and added. Otherwise returns **false**. The segments created by this method are stored in internal part list.

`bool AddLinearPart(double aLength, int aCount, string aID)`

In addition to the previous method it uses user-defined string **aID** (part label) that is assigned to the part.

`bool AddLinearPart(double aLength)`

Same as `AddLinearPart(aLength, 1)`.

`bool AddLinearPart(double aLength, int aCount,
double aAngleStart, double aAngleEnd)`

Creates and stores **aCount** new linear (1D) segments defined by **aLength** parameters with start and end angles defined as described below.

The method returns **true** if the segments have been successfully created and added. Otherwise returns **false**. The segments created by this method are stored in internal part list.

`bool AddLinearPart(double aLength, int aCount,
double aAngleStart, double aAngleEnd, string aID)`

In addition to the previous method it uses user-defined string **aID** (part label) that is assigned to the part.

Linear Properties

LinearMaxSizePerStock.

This property specifies maximum number different lengths that can be cut from one stock. For example: there are parts with three different lengths: 10 of 2m, 8 of 3m and 5 of 4m. If the property is not specified or set to be 0 then the engine calculate a cutting layout for one stock using all three sizes (2m, 3m and 4m). If the property set to 2 then the engine will use only two sizes: (2m, 3m) or (2m, 4m) or (2m, 4m) to generate cutting layout for one stock. Using this property may result in more material waste therefore there is another property:

LinearMaxSizePerStockThreshold to fine-tune the engine and allow more part lengths to be used. If a cutting layout material utilization is less than specified threshold then the engine will ignore the **LinearMaxSizePerStock** and use a different length.


Setting **LinearMaxSizePerStockThreshold** = 0 forces the engine always obey the

LinearMaxSizePerStock constraint and produce more waste as a result. Setting

LinearMaxSizePerStockThreshold = 1.0 will relax the engine to produce less waste and may violate

LinearMaxSizePerStock constraint for some layouts.

Angle Cutting Information and Properties

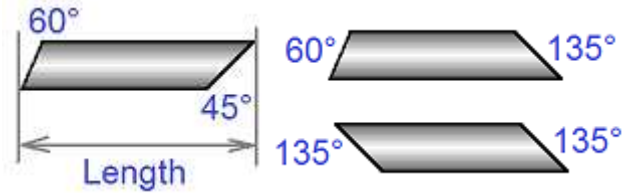

CutGLib assumes all cuts start at the bottom side of stocks and go to the top side. Therefore angles are measured from the bottom point (cut's start) of stocks and go counterclockwise direction toward a top point (cut's end). Allowed range of angles is from 10° to 170°

double **CrossSection**;



The cross-section size is used to calculate the horizontal cutting difference according the formula:

$$\mathbf{HorizDif = CrossSection * Tangency(Angle - 90^\circ)}$$

If **HorizDif** is negative then the top point (cut's end) is located on the right side of the bottom point (cut's start). This happens for angles less than 90°. If **HorizDif** is positive then top point (cut's end) is located on the left side of the bottom point (cut's start). This happens for angles bigger than 90°.

bool **LinearExactAngle**;

Different parts in your project could have different cutting angles. You can set this property to **False** to allow cutting parts with different adjacent angles.

For example, the first part has end cut angle of 60° and the second one has beginning cut angle of 45°. If this property is **False** then CutGLib could place the second part after the first one.


If you set **LinearExactAngle = True** then second part must have beginning angle of 60°.

If you set **LinearExactAngle = False** then optimization engine has more flexibility and the results will be more optimized.

This is an example of a cutting layout when this property set to **True**:



This is an example of a cutting layout when this property set to **False**:

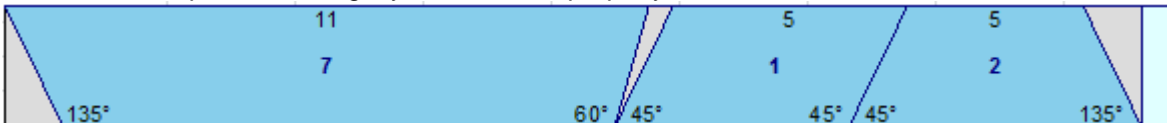


bool **LinearAllowRotate**;

When you cut non-symmetrical stocks, such as profile beams it's important to preserve the cutting angles as they specified. If you cut symmetrical stock, such as pipe, bars or tubes the cutting angles can be turned by 180° to get more optimized results.

For example, the first part has end angle of 60° and the second part has beginning angle of 120°. Cutting the second part after the first will produce some material waste. However, if we turned the second part upside-down (by 180°) then the start angle would become 60° and there would be no waste during the cutting.

Bottom line - if you cut symmetrical stocks set **LinearAllowRotate = True**.

This is an example of a cutting layout when this property is **True**:

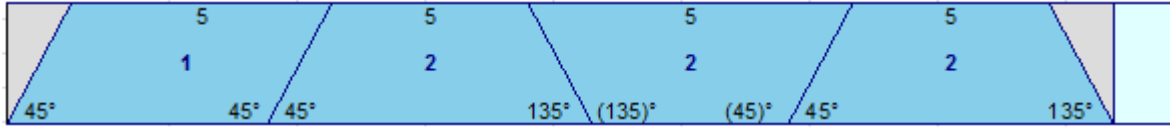

Note: Angles in the bracket have been rotated. If the original angle was 65° then when a part gets rotated the angle became (135°).

Rectangular (2D) methods:

`bool AddPart(double aWidth, double aHeight, int aCount, bool aRotatable)`

Creates and stores **aCount** of new rectangular parts defined by **aWidth** and **aHeight** parameters. **aRotatable** defines if the parts can be rotated during the calculation: if **aRotatable** is **false** then the part cannot be rotated and it's orientation will be preserved.

The method returns **true** if the parts have been successfully created and added. Otherwise returns **false**. The parts created by this method are stored in the internal list.

`bool AddPart(double aWidth, double aHeight, int aCount, bool aRotatable, string aID)`

In addition to the previous method it uses user-defined string **aID** (part label) that is assigned to the part.

`bool AddPart(double aWidth, double aHeight, bool aRotatable)`

Same as `AddPart(aWidth, aHeight, 1, aRotatable)`.

`bool AddPart(double aWidth, double aHeight, int aCount)`

Same as `AddPart(aWidth, aHeight, aCount, true)`.

`bool AddPart(double aWidth, double aHeight)`

Same as `AddPart(aWidth, aHeight, 1, true)`.

`bool AddStock(double aWidth, double aHeight, int aCount, string aID)`

Creates and store **aCount** of the rectangular stocks specified by **aWidth**, **aHeight** and text **aID**.

If several different stock sizes are defined then the calculation engine tries to find out the combination of stocks that produces the least used area.

`bool AddStock(double aWidth, double aHeight, int aCount)`

Creates and store **aCount** of the rectangular stocks specified by **aWidth** and **aHeight**.

If several different stock sizes are defined then the calculation engine tries to find out the combination of stocks that produces the least used area.

`bool AddStock(double aWidth, double aHeight)`

Same as `AddStock(aWidth, aHeight, 1)`.

`void SetVerticalCutDirection(bool aRollMode)`

Suitable for roll (stripe) cutting. If **aRollMode** is **True** then it ensures the first cut is made completely from the stock's top to the bottom.

`void SetVerticalCutDirection()`

Defines the stock will be first cut vertically. Same as `SetVerticalCutDirection(false)`.

`void SetHorizontalCutDirection(bool aRollMode)`

Suitable for roll (stripe) cutting. If **aRollMode** is **True** then it ensures the first cut is made completely from the stock's left side to the right one.

`void SetHorizontalCutDirection()`

Defines the stock will be first cut horizontally. Same as `SetHorizontalCutDirection(false)`.

`void SetAutoCutDirection()`

Defines the calculation engine will automatically detect what direction produce better results and use this direction to cut the stock first time.

Calculation Methods:

Linear (1D) method:

string **ExecuteLinear()**;

Performs 1D-cutting calculation of the linear parts in the source list on the stocks that sizes are defined by **AddLinearStock()**. It calculates the parts layout and defines number of stocks (**UsedLinearStockCount**) required to cut all parts. Returns empty string if calculation was done successfully. Otherwise returns an error message.

Rectangular (2D) method:

string **Execute()**;

Performs guillotine cutting calculation of the parts in the source list on the specified (**AddStock**) stocks. Only orthogonal cuts from one side completely to another side are allowed. It calculates the parts layout and defines number of stocks (**UsedStockCount**) required to cut all parts. Returns empty string if calculation was done successfully. Otherwise returns an error message.

Result Methods:

`bool GetLayoutInfo(int aIndex, out int aFirstStock, out int aStockCount);`
Gets information about the layout `aIndex`, such as index of the first stock (`aFirstStock`) in the layout and count of stocks (`aStockCount`) that share the same layout. `aIndex` is from **0** to `LayoutCount - 1`. Function returns **True** if the layout information successfully retrieved.

`double GetLayoutFillRatio(int aLayout);`
Gets layout's fill ratio in value between 0 and 1.

`int GetPartCountOnStock(int aStockNo);`
Returns number of parts cut (or placed) from the specified stock `aStockNo`.

`int GetPartIndexOnStock(int aStockNo, int aPartNo);`
Returns the global part index cut (or placed) from the specified stock `aStockNo`. `aPartNo` is the part ordinal number and goes from **0** to `GetPartCountOnStock(aStockNo) - 1`.

`int GetRemainingPartCountOnStock(int aStockNo);`
Returns number of remaining / waste parts left from the specified stock `aStockNo`.

`int GetRemainingPartIndexOnStock(int aStockNo, int aPartNo);`
Returns the global remaining part index left over from the specified stock `aStockNo`. `aPartNo` is the part ordinal number and goes from **0** to `GetRemainingPartCountOnStock(aStockNo) - 1`.

Linear (1D) methods:

```
int GetLinearCutsCount();
```

Gets the count of global linear cuts.

```
bool GetLinearCut(int aIndex, out int aStock, out double aLocation)
```

Gets the linear cut with the specified global index (from 0 to **GetLinearCutsCount-1**). Each cut is defined by **aLocation** point and indicates the position where to cut the linear **StockNo**. Returns **false** if the cut index is out of range.

```
bool GetLinearCut(int aIndex, out int aStock,  
                 out double aLocation,  
                 out double aAngle)
```

Gets the linear cut with the specified global index (from 0 to **GetLinearCutsCount-1**). Each cut is defined by **aLocation** point and indicates the position where to cut the linear **StockNo**. Returns **false** if the cut index is out of range. **aAngle** defines the angle with which the cut needs to be done.

```
int GetStockCutCount(int aStock);
```

Gets the count of cuts for the specified linear stock.

```
bool GetLinearStockCut(int aStock, int aCut,  
                      out double aLocation,  
                      out double aAngle)
```

Gets the linear cut with the specified index for the specified stock. Each cut is defined by **aLocation** start point and cutting angle **aAngle**. Returns **false** if the cut index is out of range (0.. **GetStockCutCount-1**).

```
bool GetResultLinearPart(int aPart,  
                        out int Stock,  
                        out double aLength,  
                        out double aLocation);
```

Gets the length and calculated position of the linear part (1D) with the specified part index **aPart**.

aStock indicates the stock the part was cut from.

aPart is the same index from the source list and it goes from **0** to **PartCount - 1**.

The method returns **false** if the part **aPart** was not cut from the stock, for example, in case of incomplete optimization (**CompleteMode = false**).

aLocation defines the position of the part on the stock.

```
bool GetResultLinearPart(int aPart,  
                        out int Stock,  
                        out double aLength,  
                        out double aLocation,  
                        out string aID);
```

In addition to the previous method this one returns user-defined string **aID** (part label) that has been assigned to the part by **AddLinearPart ()** method.

```

bool GetResultLinearPart(int aPart,
                        out int Stock,
                        out double aLength,
                        out double aAngleStart,
                        out double aAngleEnd,
                        out double aLocation,
                        out bool aRotated);

```

Gets the length, calculated position, start and end cutting angles and rotated status of the linear part (1D) with the specified part index **aPart**.

aStock indicates the stock the part was cut from.

aPart is the same index from the source list and it goes from **0** to **PartCount - 1**.

The method returns **false** if the part **aPart** was not cut from the stock, for example, in case of incomplete optimization (**CompleteMode = false**).

aLocation defines the position of the part on the stock.

aAngleStart and **aAngleEnd** define part's start and end angles.

aRotated defines if the part has been rotated by 180° along its axis to get better match of its start and end angles.

```

bool GetResultLinearPart(int aPart,
                        out int Stock,
                        out double aLength,
                        out double aAngleStart,
                        out double aAngleEnd,
                        out double aLocation,
                        out bool aRotated,
                        out string aID);

```

In addition to the previous method this one returns user-defined string **aID** (part label) that has been assigned to the part by **AddLinearPart()** method.

```

bool GetRemainingLinearPart(int aPart,
                            out int aStock,
                            out double aLength,
                            out double aLocation);

```

Gets the length and calculated position of the remaining part (cut-off) left over linear cuts from the stock.

aStock indicates the stock the part was left from.

aPart is from 0 to **RemainingPartCount - 1**.

The method returns **false** if the index is more or equal to the number of remaining parts.

```

bool GetRemainingLinearPart(int aPart,
                            out int aStock,
                            out double aLength,
                            out double aLocation,
                            out double aAngle);

```

Gets the length and calculated position of the remaining part (cut-off) left over linear cuts from the stock.

aStock indicates the stock the part was left from.

aPart is from 0 to **RemainingPartCount - 1**.

aAngle defines the angle of the waste part cut in case of angled cutting. If it's 0 then angle cut has not been used.

The method returns **false** if the index is more or equal to the number of remaining parts.

```

bool GetLinearStockInfo(int aStock,
                       out double aLength, out bool aActive, out string aID)

```

Returns the length and text ID of the stock with specified index **aStock**. The **aStock** is the same as **aStock** parameter in previous methods (**GetResultLinearPart()** and **GetRemainingLinearPart()**).

aActive indicates the stock was used during the calculation. If **aActive** is **false** then this stock was not used.

aStock is a global index of all stocks (used and not used) specified in the system and goes from **0** to **LinearStockCount - 1**.

Rectangular (2D) methods:

```
bool GetResultPart(int aPart,  
    out int aStock,  
    out double aWidth, out double aHeight,  
    out double aX, out double aY,  
    out bool aRotated);
```

Gets the size and calculated position of the specified part.

If the part was rotated during the calculation then **Rotated** is **true**. **aWidth** and **aHeight** don't get changed during part rotation and their values are preserved.

aStock indicates the stock the part was cut from.

aPart is the same index from the source list and it goes from **0** to **PartCount** - 1.

The method returns **false** if the part **aPart** was not cut from the stock, for example, in case of incomplete optimization (**CompleteMode** = **false**).

```
bool GetResultPart(int aPart,  
    out int aStock,  
    out double aWidth, out double aHeight,  
    out double aX, out double aY,  
    out bool aRotated,  
    out string aID);
```

In addition to the previous method this one returns user-defined string **aID** (part label) that has been assigned to the part by **AddPart ()** method.

```
bool GetRemainingPart(int aPart,  
    out int aStock,  
    out double aWidth, out double aHeight,  
    out double aX, out double aY);
```

Gets the size and calculated position of the remaining part left over guillotine cuts from the stock.

aPart is from 0 to **RemainingPartCount** - 1.

The method returns **false** if the index is more or equal to the number of remaining parts.

```
bool GetStockInfo(int aStock,  
    out double aWidth, out double aHeight,  
    out bool aActive, out string aID)
```

Returns the sizes and text ID of the used stock with specified Index. **aStock** is a global index of all stock (used and not used) specified in the system goes from **0** to **StockCount** -1.

aActive indicates the stock was used during the calculation. If **aActive** is **false** then this stock was not used.

```
int GetPartCutsCount(int aPart);
```

Returns the number of nesting cuts to be done for the specified part. **aPart** indicates the index of the part. Returns -1 if the index is out of bounds (0..PartCount-1)

```
bool GetPartCut(int aPart, int aCut,  
    out int aStock,  
    out double aStart_X, out double aStart_Y,  
    out double aEnd_X, out double aEnd_Y);
```

Gets the nesting cut **aCut** for the specified part (**aPart**). Each cut is defined by Start point and End point.

Each point is defined by X and Y coordinates.

Returns **false** if the part index more or equal to the number of parts or **aCut** is more or equal to the number of cuts for the part.

Getting cuts

```
int GetCutsCount();
```

Returns global number of guillotine cuts.

```
bool GetCut(int aCut, out int aStock,  
            out double aStart_X, out double aStart_Y,  
            out double aEnd_X, out double aEnd_Y);
```

Gets the guillotine cut with the specified index. **aStock** indicates the stock index the cut is made for. Each cut is defined by Start point and End point. Each point is defined by X and Y coordinates. Guillotine cuts must be done in the order defined by the calculation, e.a. 0,1,2, etc. One should not make cut 3 before cut 2.

Returns **false** if the cut index is out of range (0.. GetGuillotineCutsCount -1).

```
int GetStockCutCount(int aStock);
```

Gets the count of guillotine cuts for the specified stock.

```
bool GetStockCut(int aStock, int aCut,  
                out double aStart_X, out double aStart_Y,  
                out double aEnd_X, out double aEnd_Y);
```

Gets the guillotine cut with the specified index for the specified stock. Each cut is defined by Start point and End point. Each point is defined by X and Y coordinates. Guillotine cuts must be done in the order defined by the calculation, e.a. 0,1,2, etc. One should not make cut 3 before cut 2.

Returns **false** if the cut index is out of range (0.. GetStockCutCount-1).

```
int GetStockTrimCutCount(int aStock);
```

Gets the count of guillotine trim cuts for the specified stock.

```
bool GetStockTrimCut(int aStock, int aCut,  
                    out double aStart_X, out double aStart_Y,  
                    out double aEnd_X, out double aEnd_Y);
```

Gets the trim cut with the specified index for the specified stock. Each trim cut is defined by Start point and End point. Each point is defined by X and Y coordinates. Trim cuts are done prior to the actual cutting.

Returns **false** if the cut index is out of range (0.. GetStockTrimCutCount-1).

Export results to file

CutGLib provides several methods to export cutting optimization results as external files in different formats.

Image File

```
bool CreateStockImage(int aStock,  
                     string aImageFileName  
                     int aMaxSize);
```

Generates image file (**PNG format**) with the specified name for the specified 2D (panel) stock. **aMaxSize** defines the maximum image file width or height. If a stock has width = 500 and height = 1000 then the PNG image will be 500x1000 pixels. It returns **true** if the file has been created successfully.

```
bool CreateStockImage(int aStock, string aImageFileName);  
Same as CreateStockImage(aStock, aImageFileName, 1000);
```

```
bool CreateLinearStockImage(int aStock,  
                           string aImageFileName  
                           int aMaxSize);
```

Generates image file (**PNG format**) with the specified name for the specified 1D (linear) stock. **aMaxSize** defines the maximum image file width. If a stock has length = 500 then the PNG image will have width of 500 pixels. It returns **true** if the file has been created successfully.

```
bool CreateLinearStockImage(int aStock, string aImageFileName);  
Same as CreateLinearStockImage(aStock, aImageFileName, 1000);
```

AutoCAD DXF

```
bool ExportToDXF(string aFileName, bool aIncludePartIDs);
```

Generates AutoCAD DXF file (version R12) with the specified name for all used stocks. For each exported stock the export creates a new layer with name Panel_1, Panel_2, etc. Boolean parameter **aIncludePartIDs** defines if the part labels (IDs) will be exported to DXF file as well.

Excel CSV

```
bool ExportToCSV(string aFileName);
```

Generates text comma-separated file (CSV) with the specified name for all used parts combined by the stocks.

Licensing.

In order to use CutGLib after 30-days trial period the library requires activation of the license.

There are two license types:

1. **Single** – issued for the particular computer and links to its hardware configuration. If the library moved to another computer then the license will not work and another activation is required.
2. **Site** – this license is issued to the company (or individual) with a unique license key that allows to use the library on unlimited number of computer. The **Site** license provides developers with ability to distribute CutGLib with their applications to the end-users.

The **Single** license activation requires the hardware code from the computer where CutGLib will be used. This code is accessible from the method `string ComputerHardwareCode()`:

```
// First we create a new instance of the cut engine
CutEngine Calculator = new CutEngine();
// Activation of the single license
string HardwareCode = Calculator.ComputerHardwareCode();
```

This code (**HardwareCode**) needs to be sent to Optimalon Software at e-mail register@optimalon.com. After that Optimalon Software will generate the license key for the specified hardware code and send back to the client.

In order to activate **Single** license the client needs to call the method in their code after creation of the cut engine instance:

```
// First we create a new instance of the cut engine
CutEngine Calculator = new CutEngine();
// Activation of the single license
Calculator.SetComputerLicenseKey(<License_Key>);
```

Where **License_Key** is a text license key received from Optimalon Software.

The **Site** license does not require the hardware code and Optimalon Software will generate it automatically and send to the client after the purchasing.

In order to activate **Site** license the client needs to call the method in their code after creation of the cut engine instance:

```
// First we create a new instance of the cut engine
CutEngine Calculator = new CutEngine();
// Activation of the site license
Calculator.SetSiteLicenseKey(<License_Key>);
```

Where **License_Key** is a text site license key received from Optimalon Software.

3. Example of the Library Usage. (C# syntax)

3.1. Cut one linear stock.

This example demonstrates how to cut a linear stock (log/beam/wire) with size of **10.0** feet. Let say we need to cut **9** parts of **3.0** feet, **3** parts of **5.0** feet and **2** parts of **7.0** feet.

```
// First we create a new instance of the cut engine
CutEngine Calculator = new CutEngine();

// Add 7 linear stocks of 10.0 feet
Calculator.AddLinearStock(10.0, 7);

// Add linear pieces we have to cut from the stock:
Calculator.AddLinearPart(3.0, 9); // 9 pieces of 3.0 feet
Calculator.AddLinearPart(5.0, 3); // 3 pieces of 5.0 feet
Calculator.AddLinearPart(7.0, 2); // 2 pieces of 7.0 feet

// Run the calculation:
string result = Calculator.ExecuteLinear();

// If result is not empty then it has an error message
if (result == "")
{
    // Calculator.UsedLinearStockCount specifies the number of linear stocks required.
    Console.WriteLine("Need {0} linear stocks", Calculator.UsedLinearStockCount);

    int StockNo;
    double Len = 0, X = 0;
    // Get the results. Here we just iterate by parts and and get
    // indices of stocks where a part has to be cut from
    for (int iPart = 0; iPart < Calculator.PartCount; iPart++)
    {
        if (Calculator.GetResultLinearPart(iPart, out StockNo, out Len, out X))
        {
            // StockNo specifies the stock part iPart gets cut from
            // Len is the length of the part iPart
            // X is the coordinate of the part iPart on the stock StockNo.
            Console.WriteLine("Part {0}: stock={1} X={2}; Length={3}",
                iPart, StockNo, X, Len);
        }
        else Console.WriteLine("Source piece {0} was not placed\n", iPart);
    }
}
else
{
    // Output the error message
    Console.WriteLine("%S", result);
}
```

3.2. Cut multiple size linear stocks.

This example demonstrates how to cut a linear stock (log/beam/wire) with different sizes.

Let say we need to cut **6** pieces of **11.0** feet, **8** pieces of **9.0** feet, **12** pieces of **7.0** feet and **4** pieces of **16.0** feet. There are **10** stocks of **20.0** feet, **5** stocks of **31.0** feet and **5** of **34.0** feet.

```
// First we create a new instance of the cut engine
CutEngine Calculator = new CutEngine();
// Add 10 linear stocks of 20.0 feet
Calculator.AddLinearStock(20.0, 6);
// Add 5 linear stocks of 31.0 feet
Calculator.AddLinearStock(31.0, 5);
// Add 5 linear stocks of 34.0 feet
Calculator.AddLinearStock(34.0, 5);
// Add linear pieces we have to cut from the stock:
Calculator.AddLinearPart(11.0, 6); // 6 pieces of 11.0 feet
Calculator.AddLinearPart( 9.0, 8); // 8 pieces of 9.0 feet
Calculator.AddLinearPart( 7.0, 12); // 12 pieces of 7.0 feet
Calculator.AddLinearPart(16.0, 4); // 4 pieces of 16.0 feet
// Run the calculation
string result = Calculator. ExecuteLinear();
if (result != "")
{
    // Output the error message and exit
    Console.Write("%S", result);
    return;
}
```

Now we use another approach to output results. The calculation created several different cutting layouts, so let's iterate by layouts and output the stock length used for each layout and parts cut.

```
int StockIndex, StockCount, iPart, iLayout, partCount, partIndex, tmp, iStock;
double partLength, X, StockLength;
bool StockActive;

for (iLayout = 0; iLayout < Calculator.LayoutCount; iLayout++)
{
    // StockIndex is global index of the first stock used in the layout iLayout
    // StockCount is quantity of stocks of the same length as StockIndex used
    Calculator.GetLayoutInfo(iLayout, out StockIndex, out StockCount);
    // Iterate by each stock in the layout, starting from StockIndex
    for (iStock = StockIndex; iStock < StockIndex + StockCount; iStock++)
    {
        // Output the stock index and length
        Calculator.GetLinearStockInfo(iStock, out StockLength, out StockActive);
        Console.Write("Stock={0}: Length={1}", iStock, StockLength);
        // Output the information about parts cut from this stock
        // Get quantity of parts cut from the stock:
        partCount = Calculator.GetPartCountOnStock(iStock);
        // Iterate by parts and get indices of cut parts
        for (iPart = 0; iPart < partCount; iPart++)
        {
            // Get global part index of iPart cut from the current stock
            partIndex = Calculator.GetPartIndexOnStock(iStock, iPart);
            // Get length and location of the part
            // X - coordinate on the stock where the part begins.
            Calculator.GetResultLinearPart(partIndex, out tmp, out partLength, out X);
            // Output the part information
            Console.Write("Part= {0}: X={1}; Length={2}", partIndex, X, partLength);
        }
    }
}
```

3.3. Cut one size stock.

This example demonstrates how to cut a **2D** rectangular stock panels with size of **2400x2000** mm. Let say we need to cut **9** parts of **640x420** mm, **14** parts of **150x720** mm and **12** parts of **1000x420** mm. In addition the **14** parts of **150x720** mm cannot be rotated.

```
// First we create a new instance of the cut engine
CutEngine Calculator = new CutEngine();
Calculator.AddStock(2400, 2000, 5); // Add 5 stocks of 2400x2000 mm
// Add parts we have to cut from the stock:
Calculator.AddPart(640, 420, 9); // 9 parts of 640x420 mm
Calculator.AddPart(150, 720, 14, false); // 14 non-rotatable parts of 150x720 mm
Calculator.AddPart(1000, 420, 12); // 12 parts of 1000x420 mm
// Run the calculation:
string result = Calculator.Execute();
```

Let's output the information about the parts, the stock indices and locations the parts cut from:

```
double W = 0, H = 0, X = 0, Y = 0;
bool Rotated;
int StockNo;
Console.WriteLine("Part Count={0}", Calculator.PartCount);
for (int iPart = 0; iPart < Calculator.PartCount; iPart++)
{
    if (Calculator.GetResultPart(iPart, out StockNo, out W, out H,
                                out X, out Y, out Rotated))
    {
        // StockNo - stock index the part iPart cut from
        // W,H - part width and height
        // X,Y - coordinates of the top left corner of the part on the stock StockNo
        // If Rotated is true then the part has been roated by 90°
        Console.WriteLine("Part {0}: stock={1} X={2}; Y={3}; Width={4}; Height={5}",
                          iPart, StockNo, X, Y, W, H);
    }
    else Console.WriteLine("Part {0} was not placed", iPart);
}
```

Also let's output the information about the cuts we need to make (important for **CNC** machines). Each cut defined by two pairs of coordinates: Cut Start (**X1, Y1**) and Cut End (**X2, Y2**).

```
int StockNo, iCut, CutsCount;
double Width, Height, X1 = 0, Y1 = 0, X2 = 0, Y2 = 0;
bool active;
// Output guilltoine cuts for each stock
for (StockNo = 0; StockNo < Calculator.StockCount; StockNo++)
{
    Calculator.GetStockInfo(StockNo, out Width, out Height, out active);
    // Stock was not used during calculation and we skip it
    if (!active) continue;
    // First output any trim cuts for the stock StockNo
    CutsCount = Calculator.GetStockTrimCutCount(StockNo);
    for (iCut = 0; iCut < CutsCount; iCut++)
    {
        Calculator.GetStockTrimCut(StockNo, iCut, out X1, out Y1, out X2, out Y2);
    }
    // Now output any actual cuts for the stock StockNo
    CutsCount = Calculator.GetStockCutCount(StockNo);
    for (iCut = 0; iCut < CutsCount; iCut++)
    {
        Calculator.GetStockCut(StockNo, iCut, out X1, out Y1, out X2, out Y2);
    }
}
```

3.4. Cut multiple size stocks.

This example demonstrates how to cut a 2D rectangular stock/panels with different sizes. All parts cannot be rotated.

```
// First we create a new instance of the cut engine
CutEngine Calculator = new CutEngine();
Calculator.AddStock(2000, 2400, 5); // 5 stocks of 2000x2400
Calculator.AddStock(1800, 2000, 5); // 5 stocks of 1800x2000
Calculator.AddStock(1200, 1600, 10); // 10 stocks of 1200x1600
// Add parts we have to cut from the stocks:
Calculator.AddPart(650, 450, 36, false); // 36 non-rotatable parts of 650x450 mm
Calculator.AddPart(650, 732, 24, false); // 24 non-rotatable parts of 650x732 mm
Calculator.AddPart(500, 430, 24, false); // 24 non-rotatable parts of 500x430 mm
Calculator.AddPart(163, 422, 36, false); // 36 non-rotatable parts of 163x422 mm
Calculator.AddPart(444, 363, 36, false); // 36 non-rotatable parts of 444x363 mm
Calculator.AddPart(104, 362, 36, false); // 36 non-rotatable parts of 104x362 mm
// Run the calculation
string result = Calculator.Execute();
```

Let's iterate by layouts and output the stock sizes used for each layout and parts cut.

```
int stockIndex, stockCount, iPart, iLayout, partCount, partIndex, tmp, iStock;
double width, height, X, Y, W, H;
bool rotated, stockActive;
string Txt;
Console.WriteLine("Used {0} stocks", Calculator.UsedStockCount);
Console.WriteLine("Created {0} different layouts", Calculator.LayoutCount);
// Iterate by each layout and output information about each layout,
// such as number and length of used stocks and part indices cut from the stocks
for (iLayout = 0; iLayout < Calculator.LayoutCount; iLayout++)
{
    Calculator.GetLayoutInfo(iLayout, out stockIndex, out stockCount);
    // Output information about each stock, such as stock Length
    for (iStock = stockIndex; iStock < stockIndex + stockCount; iStock++)
    {
        Calculator.GetStockInfo(iStock, out width, out height, out stockActive);
        Console.WriteLine("Stock={0}: Width={1}; Height={2}", iStock, width, height);
        // Output the information about parts cut from this stock
        // First we get quantity of parts cut from the stock
        partCount = Calculator.GetPartCountOnStock(iStock);
        // Iterate by parts and get indices of cut parts
        for (iPart = 0; iPart < partCount; iPart++)
        {
            // Get global part index of iPart cut from the current stock
            partIndex = Calculator.GetPartIndexOnStock(iStock, iPart);
            // Get sizes and location of the source part with index partIndex
            Calculator.GetResultPart(partIndex,
                out tmp, out W, out H, out X, out Y, out rotated);
            // W,H - width and height of the part partIndex
            // X,Y - coordinates of the top left corner of the part on the stock iStock
            // If rotated is true then the part has been rotated by 90°
            Console.WriteLine("Part={0}; stock={1}; Width={2}; Height={3}; X={4}; Y={5}",
                partIndex, iStock, W, H, X, Y);
        }
    }
}
```